
9448 USER GUIDE


TO FULL SET



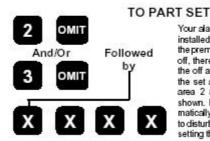



Your alarm system may have been installed to allow you to to have part of the premises set while other area(s) are off, thereby allowing free access with the off area(s), and alarm protection in the set areas. To set the system with area 2 and/or 3 omitted, proceed as shown. Note that the exit tone is automatically reduced by one third so as not to disturb sleeping occupants when part setting the system.

TO RESET AFTER AN ALARM

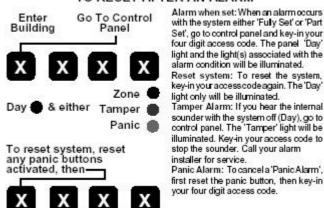


TO CHANGE YOUR ACCESS CODE

 


 

TO TEST BELLS

 

TO WALK TEST

 

When you have completed the sequence shown on the left, the internal sounder will emit a steady tone.

You can now test the operation of the Exit/Entry zone, Zones 1, 2 and 3. Each time a zone is opened, the internal sounder will emit a pulsing tone. You cannot test the Tamper Circuits' or

You cannot test the Tamper Circuits' or the 'Panic Buttons' without creating an alarm condition.

To stop walk test, key-in your access code.