

How to Set your Pyronix Enforcer Alarm System

From Main Control Panel:

Ensure your front door is shut before setting your alarm.

Enter your 4 Digit Code or Present your Prox tag to tag reader.



Setting 'A' will light up RED

if using Prox tag, system will start to set the 'A' setting straight away.



Display will say 'Please wait setting wireless'

Once the Timer starts you can then exit the door, you have 20-30 seconds to so.

Once you shut the door the Alarm will set after 5 seconds.

Unsetting your Pyronix Enforcer Alarm

When you open the front door the Alarm will start to beep with a 20-30 second countdown. Either enter your 4 digit code or present your Prox Tag.



How to use your Remote Keyfob

LOCK BUTTON = Set Area A When pressed, the Area A will start to set.	
UNLOCK BUTTON = Unset Area. When pressed, the wireless alarm system will unset any area that is already set.	
I BUTTON = Set Area B When pressed, the Area B will start to set.	
II BUTTON = Show Status When pressed, if the GREEN LED is shown then the wireless alarm system will be unset. If the RED LED is shown then the wireless alarm system will be set.	

Panic Function.

Press and hold buttons I & II together for 3 seconds. This will set the alarm off internally and externally.

Press the unlock button to turn off. You will need to go to the main panel and press YES to clear down and reset the alarm panel after.

Chime feature

The chime can be used for any input on the system. This can be set up by your engineer.

To enable the chime on the keypad, when the time is displayed, press **C**

'c' will be displayed on the right side of the keypad display. Press **C** again to clear the chime feature.

